

Acousstop Wings Installation & Care Guide

1-Product Snapshot



Elegant & aesthetic design for up to 15 meters height



Improves speech intelligibility and reduces noise



Top hung with no floor track required



High acoustic rating up to 55db with retractable seals



Impact resistant and weatherproof



Single and twin point suspensions available

2. Storage & Handling



Before You Start

- Place doors flat on a level surface to avoid warping
- Store in dry, well-ventilated area to prevent moisture damage
- Keep in original packaging if possible to prevent scratches



Avoid Compression

- Stack horizontally with wooden spacers (3-4) between each door
- Spacers should be evenly placed at both ends and middle
- Maintain humidity at 40-60% and consistent temperature
- Never lean doors against wall for long periods

3. Installation

Doors are installed using aluminum extruded tracks with wheel system. Ensure the surface is clean, level, and dry before mounting.



Option A – Track System

1. Mark level lines on ceiling/wall
2. Fix aluminum tracks securely
3. Engage door wheels onto track
4. Ensure smooth operation



Option B – Indoor Only

1. Recommended for indoor use only
2. Not suitable for outdoor installation
3. Follow site specifications for hardware
4. Maintain proper clearances

Note: Mounting methods depend on the product profile and project instructions. Follow site specifications for fixing hardware and spacing.

4. Care & Cleaning

Regular Maintenance

Clean with soft, damp cloth and mild detergent. Lubricate moving parts every 6 months with dry lubricant.

Hinge & Alignment

Check door closes flush without gaps. Adjust closing speed and tighten loose screws on handles regularly.

Seal Inspection

Check seals for cracks or tears. Replace damaged seals immediately. Verify drop seals activate when door closes.

Environment

Maintain 40-60% humidity. Avoid abrasive cleaners and oil-based lubricants that attract dust.

5. Do's & Don'ts (Quick Reference)



Do

- Clean regularly with soft cloth and mild detergent.
- Lubricate moving parts every 6 months.
- Maintain 40-60% humidity levels.
- Inspect seals and alignment periodically.



Don't

- Use abrasive cleaners or harsh chemicals.
- Apply oil-based lubricants (attracts dust).
- Install outdoors (indoor use only).
- Ignore damaged seals or misalignment.

6. Help & Support

India

contactindia@hillpointglobal.com

Dubai

contactdubai@hillpointglobal.com

Qatar

contactqatar@hillpointglobal.com

Saudi Arabia

contactsaudi@hillpointglobal.com